


SAM AND MAM ANTI-SIPHON KIT

INSTALLATION INSTRUCTIONS

For use on 1/2" Poly lines. Install an PC1 and PC2 Anti-Siphon Kit on any outbound lines where chemical is being drawn into the solution line after the valve closes.

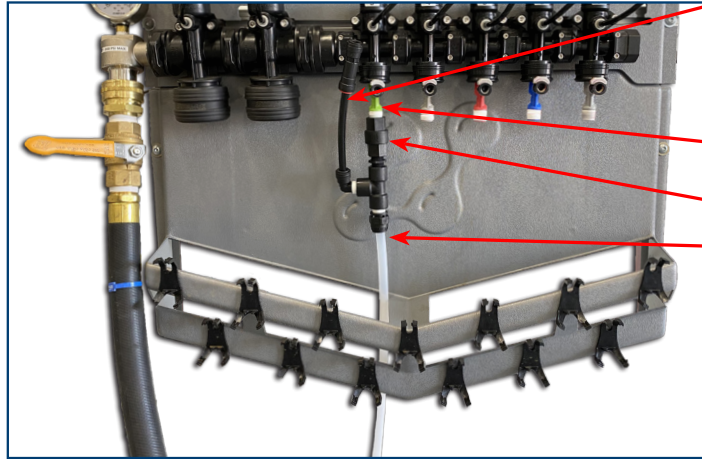

*Make Sure
Check Valve
Is Above
The "T"*

PC2 Injector

Check Valve

*Push
Outbound
Solution
Line On*



Hydra-Flex: 952-808-3640 • Sonny's Direct: 800.327.8723
hello@hydrflexinc.com • www.sonnysdirect.com

4000084 revN0522

PC3 ANTI-SIPHON KIT

INSTALLATION INSTRUCTIONS

For use on 3/4" ID braided lines. Install an PC3 Anti-Siphon Kit on any outbound lines where chemical is being drawn into the solution line after the valve closes.

